
#### **BUDDY2 Quick Start**

#### Dear users:

To get BUDDY2 started, please do the following operations:

#### Step 1

Connect the product to your car OBD interface. You can find the light will flash (it shows the Connection is good), then it comes into standby and is waiting for working. Usually the OBD interface is under the steering wheel (above the brake), some are hidden in the tool box of the hand brake, you can refer to the following picture.

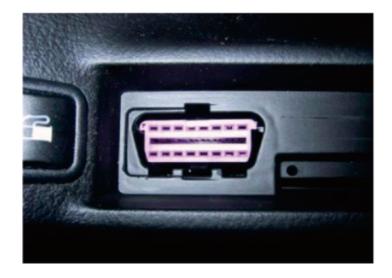

Download and install BUDDY2 App to your mobile phone. (only for


#### Android)

There are two ways to get it:

- 1. From our website: www.leoscan.eu
- 2. Search the key word "leoscan" in the Google Market.


### Step 3

On your mobile phone, click **Settings** – **Bluetooth** and turn on the Bluetooth.

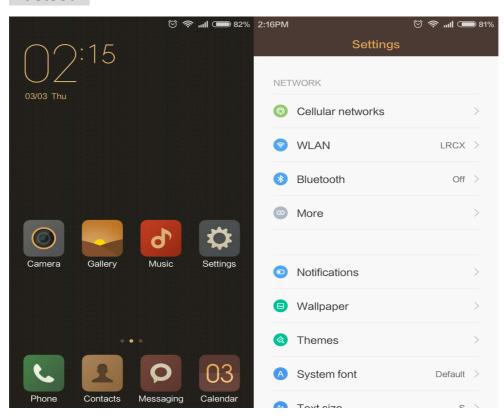


Open the BUDDY2 App in your mobile phone.

The page is shown as follows when the App is opened for the first time:

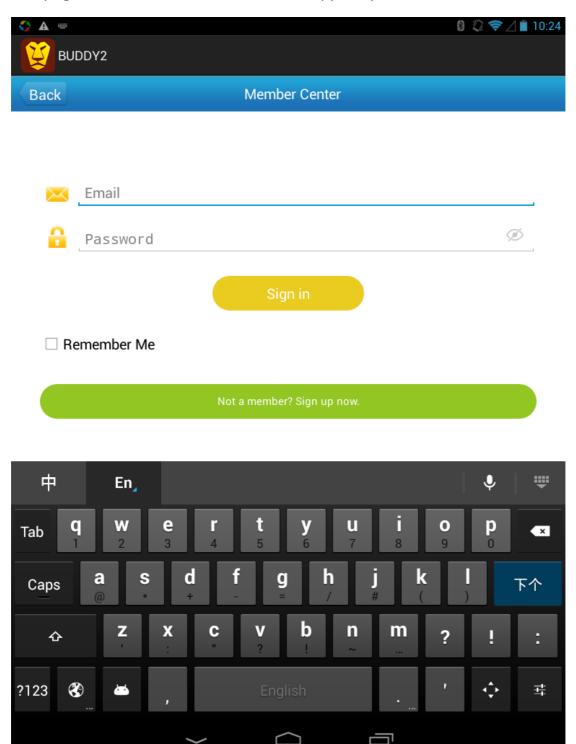



If you have not registered, please click register first. The registration page is as follows:

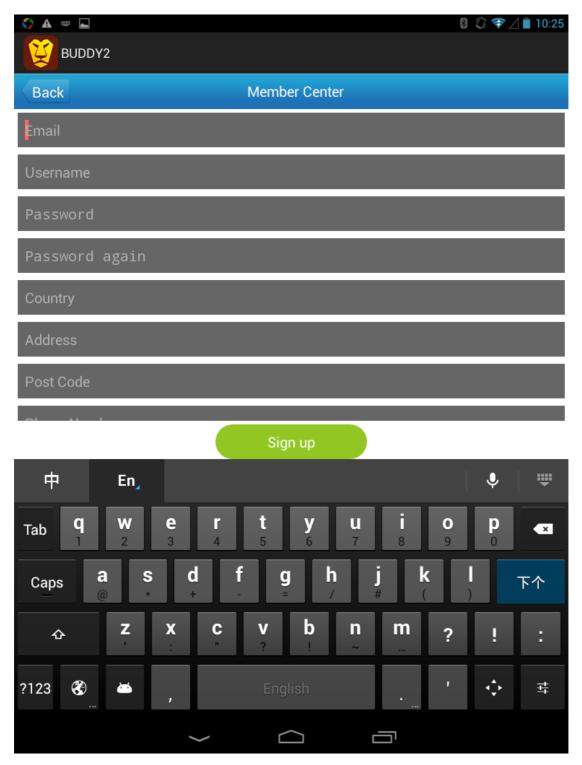

Enter all the information needed and click the **Sign up** button to finish the registration (Please remember the email and password you entered).


Then, the page automatically switches to the login interface.

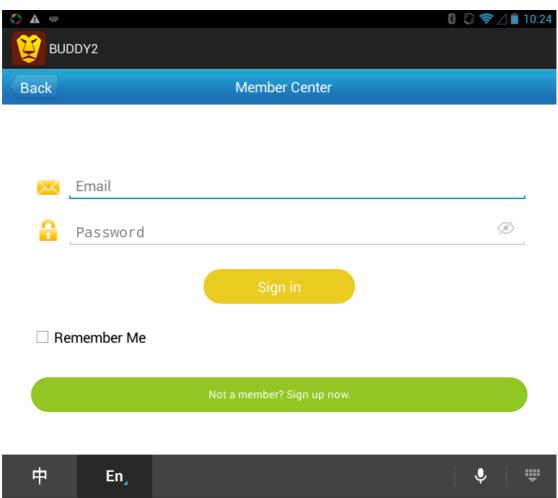


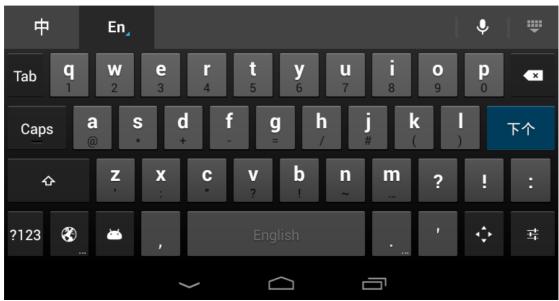

Enter the email and password used during the registration and click **Sign**in. After a successful sign-in, the page automatically switches to the VCI


Register interface, as shown in the following picture:

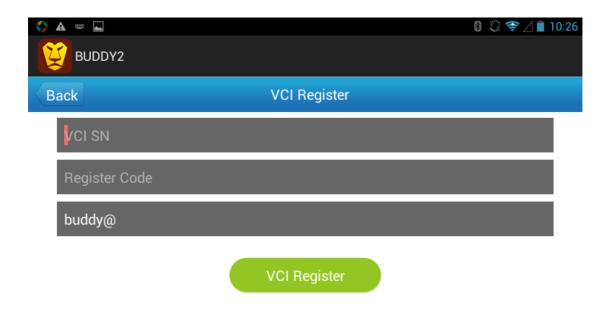

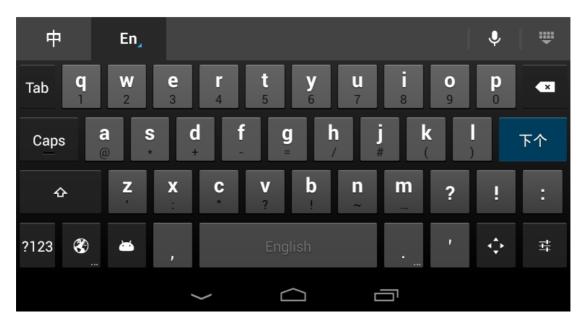


Enter the correct S/N and Register Code shown in the REGISTERCODE CARD and click **VCI Register**.


The Home Page is shown automatically after the VCI is registered successfully.

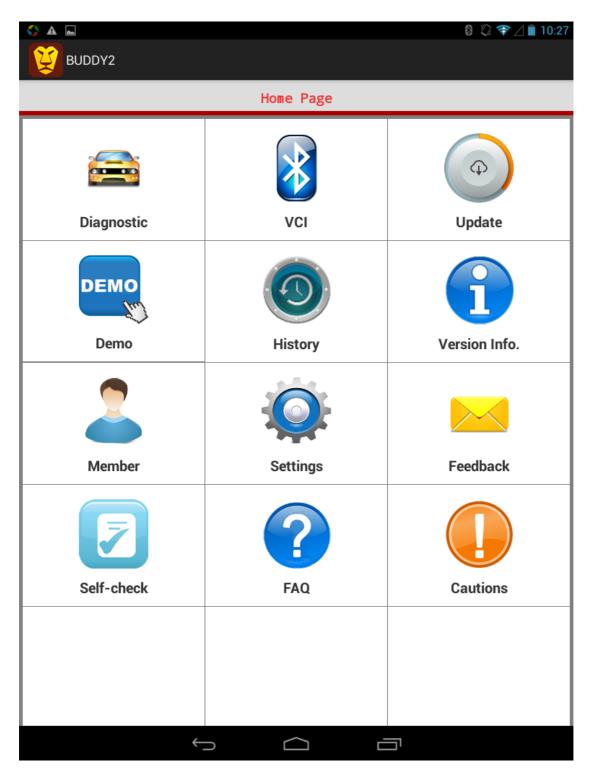


You can click **Settings** – **Language** to select language or click **Settings** – **Download Servers** to select the server needed for software download.

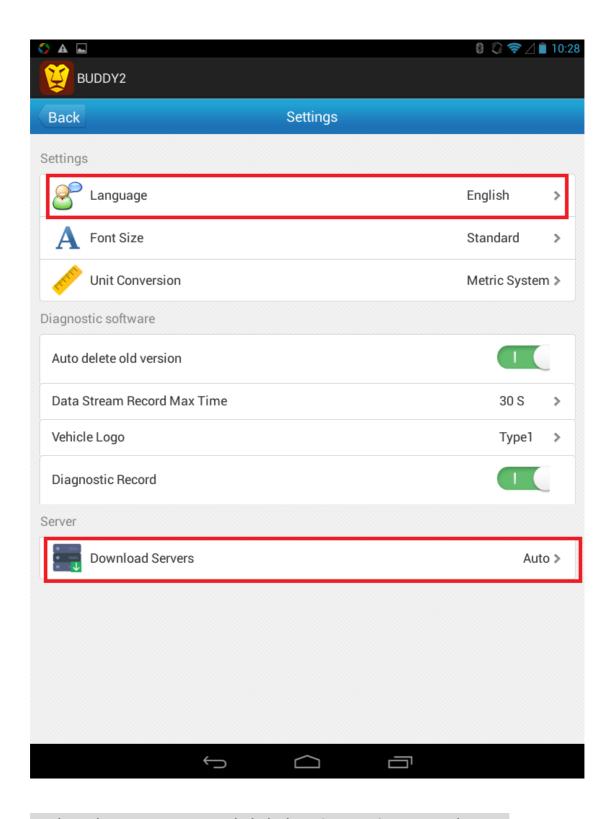


Back to the Home Page and click the **Diagnostic** menu. The VCI connection page is displayed automatically, as shown in the following picture.

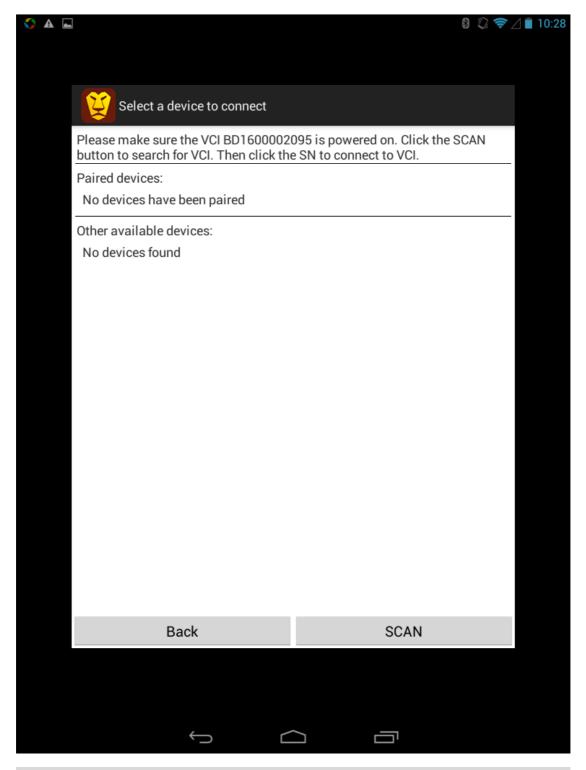


After making sure that the VCI has been powered on, click **SCAN** to search for the registered VCI, as shown in the following picture:

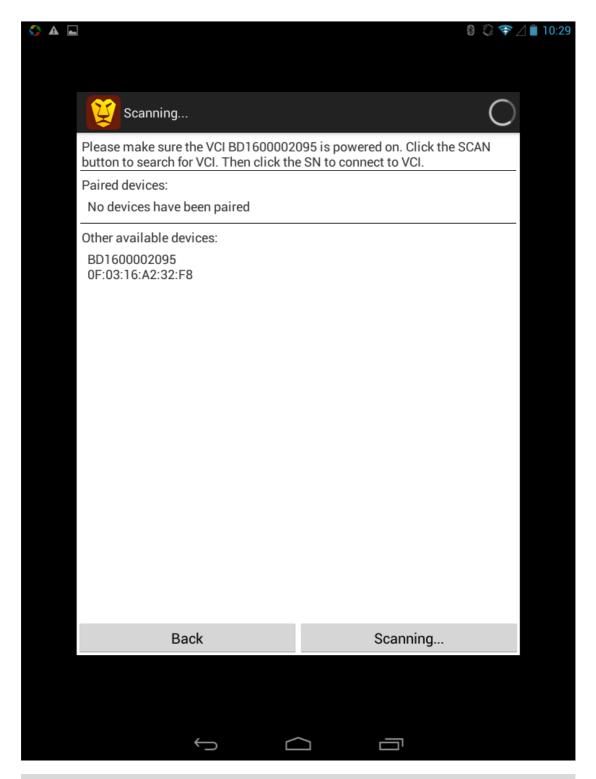

Click the VCI S/N displayed after scanning. Then, an interface is displayed as shown in the following picture:

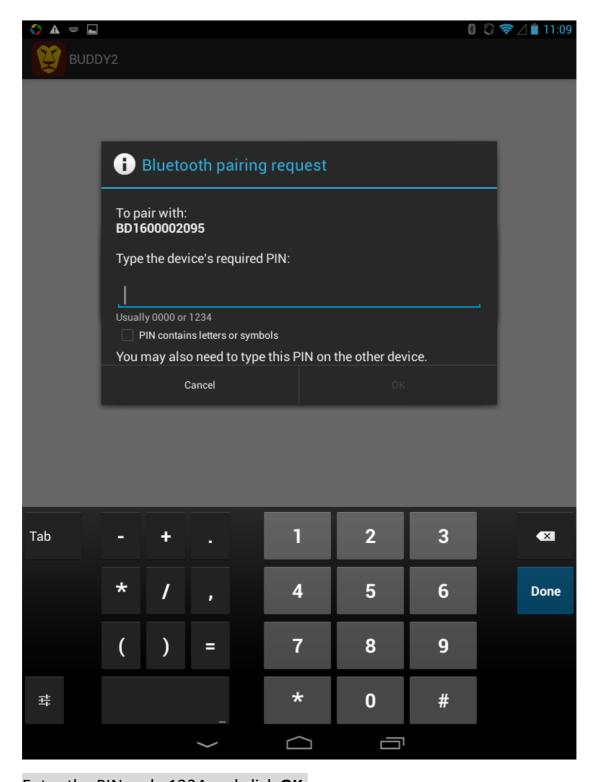


Enter the PIN code 1234 and click OK.

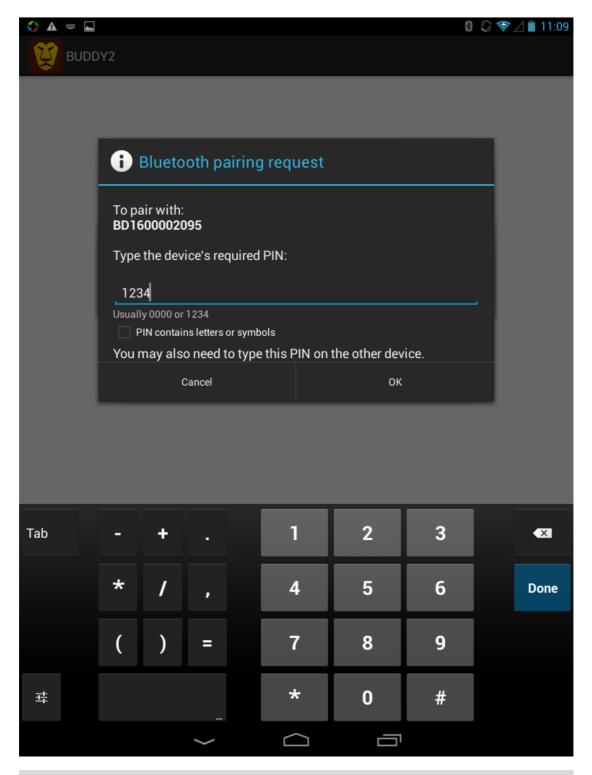

A message is displayed indicating that you have connected to your VCI.

Then, you switch to the **Special** page automatically, as shown in the following page:

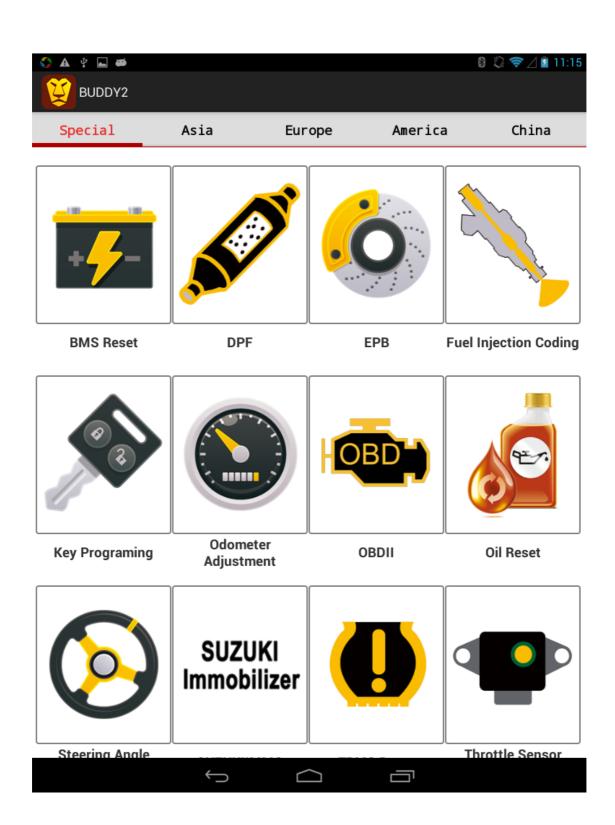


If you choose this brand for the first time, you need to download the


diagnostic software first.


There are two ways to download the diagnostic software:

1. Click the brand and download corresponding version directly.

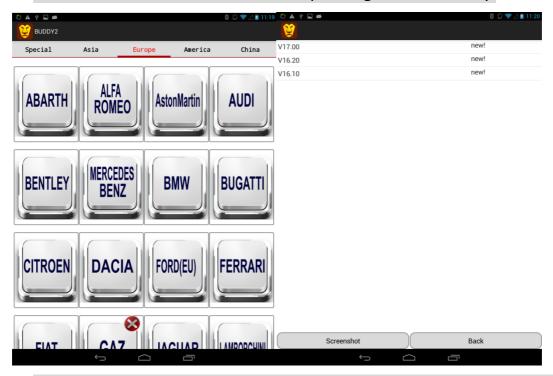

2. Return to the Home Page, click the **Update** menu to download software.

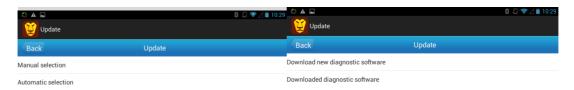

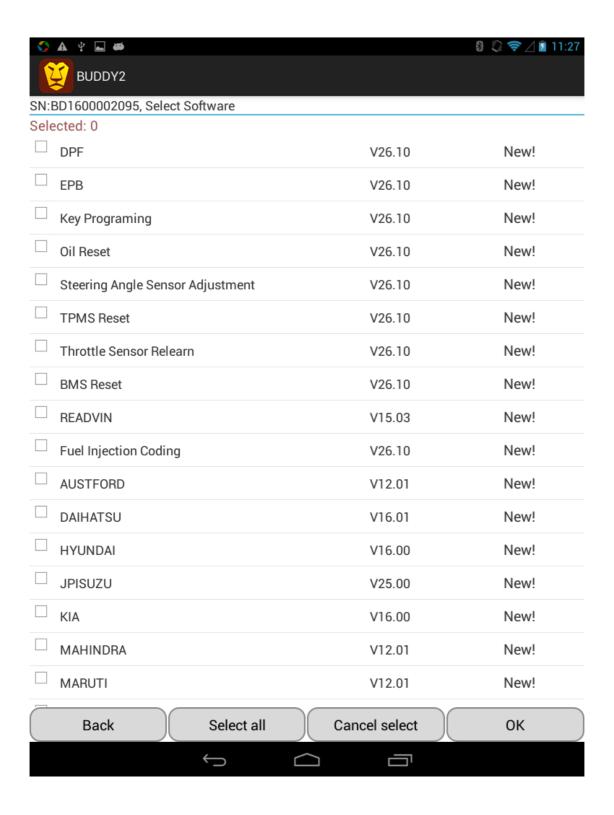

After downloading the software, select the right brand of your car in the **Diagnostic** menu, and enjoy the service that our products bring to you.

Note: Please ensure that your mobile phone remains connected to the network during sign-up, sign-in and software downloading.

#### **After service & Tech Support**

The product is offered with 1 year manufacturer warranty and updates. For detailed after sale service support, please refer to our terms and conditions service policy on our website <a href="www.leoscan.com">www.leoscan.com</a>. Please send us an email to <a href="service@leoscan.com">service@leoscan.com</a> or contact our local dealer if you need any support or have any questions!

For faster response time please use the Feedback menu option in the application Home Page.

Thank you for using our product!